IMPORTANT NOTICE - READ CAREFULLY

Installation Instructions

Telescoping Meter Valve

1) Keep meter nut extended with spacer in place during installation and pressurization.

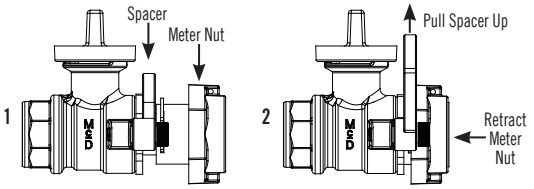

2) To remove water meter, pull spacer out of groove and retract meter nut.

PATENT PENDING

3210-644 7/19

800.292.2737 | FAX 800.832.9296 | sales@aymcdonald.com | aymcdonald.com

IMPORTANT NOTICE - READ CAREFULLY

Installation Instructions

Telescoping Meter Valve

1) Keep meter nut extended with spacer in place during installation and pressurization.

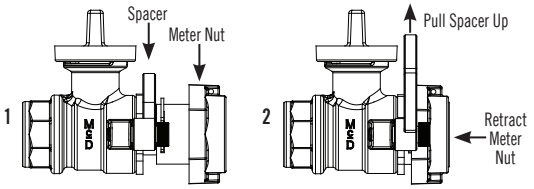

2) To remove water meter, pull spacer out of groove and retract meter nut.

PATENT PENDING

3210-644 7/19

800.292.2737 | FAX 800.832.9296 | sales@aymcdonald.com | aymcdonald.com

IMPORTANT NOTICE - READ CAREFULLY

Installation Instructions

Telescoping Meter Valve

1) Keep meter nut extended with spacer in place during installation and pressurization.

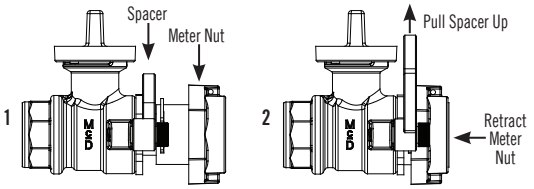

2) To remove water meter, pull spacer out of groove and retract meter nut.

PATENT PENDING

3210-644 7/19

800.292.2737 | FAX 800.832.9296 | sales@aymcdonald.com | aymcdonald.com

IMPORTANT NOTICE - READ CAREFULLY

Installation Instructions

Telescoping Meter Valve

1) Keep meter nut extended with spacer in place during installation and pressurization.

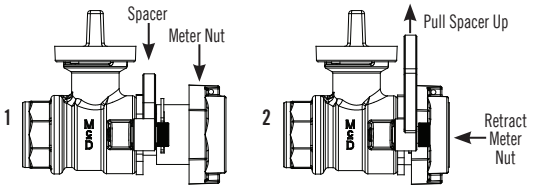

2) To remove water meter, pull spacer out of groove and retract meter nut.

PATENT PENDING

3210-644 7/19

800.292.2737 | FAX 800.832.9296 | sales@aymcdonald.com | aymcdonald.com

IMPORTANT NOTICE - READ CAREFULLY

Installation Instructions

Telescoping Meter Valve

1) Keep meter nut extended with spacer in place during installation and pressurization.

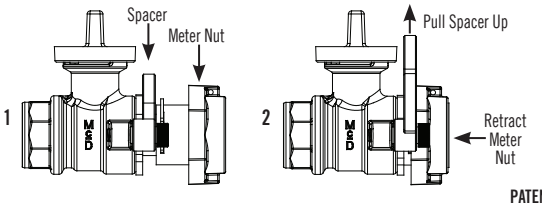

2) To remove water meter, pull spacer out of groove and retract meter nut.

PATENT PENDING

3210-644 7/19

800.292.2737 | FAX 800.832.9296 | sales@aymcdonald.com | aymcdonald.com

IMPORTANT NOTICE - READ CAREFULLY

Installation Instructions

Telescoping Meter Valve

1) Keep meter nut extended with spacer in place during installation and pressurization.

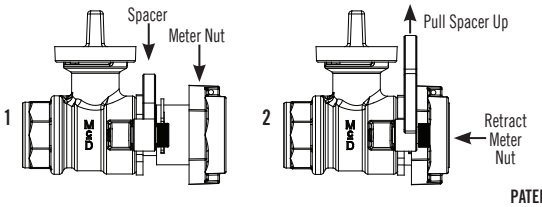

2) To remove water meter, pull spacer out of groove and retract meter nut.

PATENT PENDING

3210-644 7/19

800.292.2737 | FAX 800.832.9296 | sales@aymcdonald.com | aymcdonald.com

IMPORTANT NOTICE - READ CAREFULLY

Installation Instructions

Telescoping Meter Valve

1) Keep meter nut extended with spacer in place during installation and pressurization.

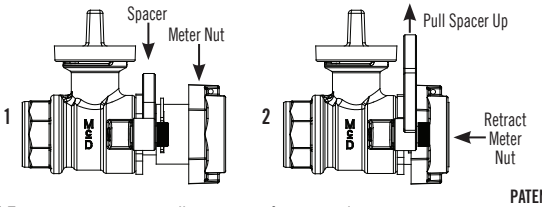

2) To remove water meter, pull spacer out of groove and retract meter nut.

PATENT PENDING

3210-644 7/19

800.292.2737 | FAX 800.832.9296 | sales@aymcdonald.com | aymcdonald.com

IMPORTANT NOTICE - READ CAREFULLY

Installation Instructions

Telescoping Meter Valve

1) Keep meter nut extended with spacer in place during installation and pressurization.

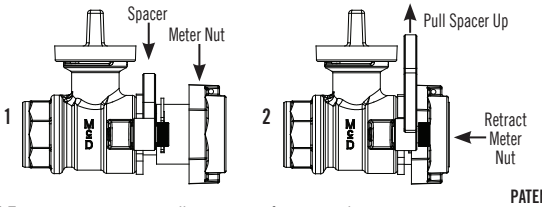

2) To remove water meter, pull spacer out of groove and retract meter nut.

PATENT PENDING

3210-644 7/19

800.292.2737 | FAX 800.832.9296 | sales@aymcdonald.com | aymcdonald.com

IMPORTANT NOTICE - READ CAREFULLY

Installation Instructions

Telescoping Meter Valve

1) Keep meter nut extended with spacer in place during installation and pressurization.

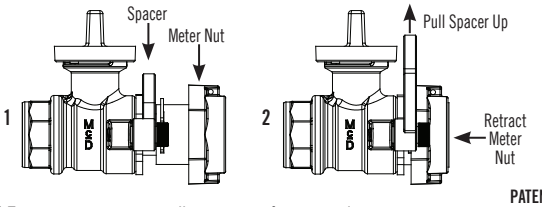

2) To remove water meter, pull spacer out of groove and retract meter nut.

PATENT PENDING

3210-644 7/19

800.292.2737 | FAX 800.832.9296 | sales@aymcdonald.com | aymcdonald.com

IMPORTANT NOTICE - READ CAREFULLY

Installation Instructions

Telescoping Meter Valve

1) Keep meter nut extended with spacer in place during installation and pressurization.

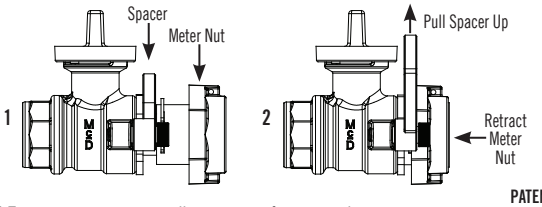

2) To remove water meter, pull spacer out of groove and retract meter nut.

PATENT PENDING

3210-644 7/19

800.292.2737 | FAX 800.832.9296 | sales@aymcdonald.com | aymcdonald.com

AVISO IMPORTANTE: LEA DETENIDAMENTE

Instrucciones de instalación

Válvula telescópica de medidor

1) Mantenga la tuerca del medidor extendida con el espaciador en su lugar durante la instalación y presurización.

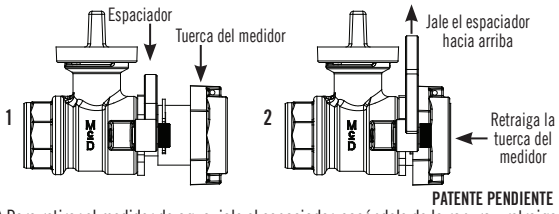

2) Para retirar el medidor de agua, jale el espaciador, sacándolo de la ranura y retraiga la tuerca del medidor.

3210-644 7/19

800.292.2737 | FAX 800.832.9296 | sales@aymcdonald.com | aymcdonald.com

AVISO IMPORTANTE: LEA DETENIDAMENTE

Instrucciones de instalación

Válvula telescópica de medidor

1) Mantenga la tuerca del medidor extendida con el espaciador en su lugar durante la instalación y presurización.

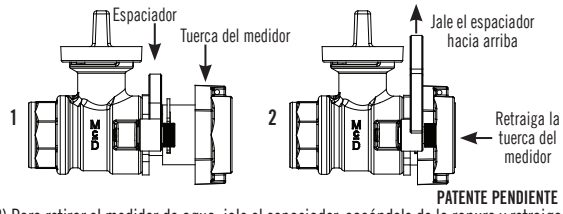

2) Para retirar el medidor de agua, jale el espaciador, sacándolo de la ranura y retraiga la tuerca del medidor.

3210-644 7/19

800.292.2737 | FAX 800.832.9296 | sales@aymcdonald.com | aymcdonald.com

AVISO IMPORTANTE: LEA DETENIDAMENTE

Instrucciones de instalación

Válvula telescópica de medidor

1) Mantenga la tuerca del medidor extendida con el espaciador en su lugar durante la instalación y presurización.

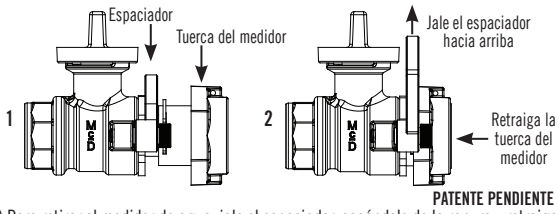

2) Para retirar el medidor de agua, jale el espaciador, sacándolo de la ranura y retraiga la tuerca del medidor.

3210-644 7/19

800.292.2737 | FAX 800.832.9296 | sales@aymcdonald.com | aymcdonald.com

AVISO IMPORTANTE: LEA DETENIDAMENTE

Instrucciones de instalación

Válvula telescópica de medidor

1) Mantenga la tuerca del medidor extendida con el espaciador en su lugar durante la instalación y presurización.

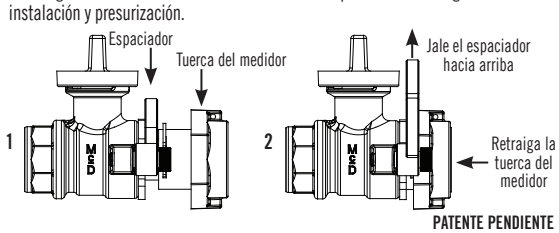

2) Para retirar el medidor de agua, jale el espaciador, sacándolo de la ranura y retraiga la tuerca del medidor.

3210-644 7/19

800.292.2737 | FAX 800.832.9296 | sales@aymcdonald.com | aymcdonald.com

AVISO IMPORTANTE: LEA DETENIDAMENTE

Instrucciones de instalación

Válvula telescópica de medidor

1) Mantenga la tuerca del medidor extendida con el espaciador en su lugar durante la instalación y presurización.

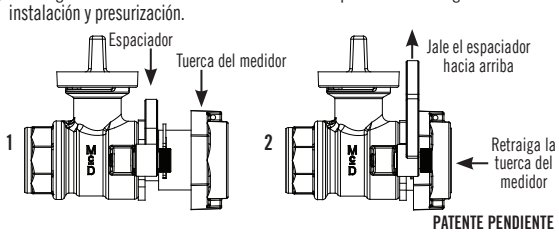

2) Para retirar el medidor de agua, jale el espaciador, sacándolo de la ranura y retraiga la tuerca del medidor.

3210-644 7/19

800.292.2737 | FAX 800.832.9296 | sales@aymcdonald.com | aymcdonald.com

AVISO IMPORTANTE: LEA DETENIDAMENTE

Instrucciones de instalación

Válvula telescópica de medidor

1) Mantenga la tuerca del medidor extendida con el espaciador en su lugar durante la instalación y presurización.

2) Para retirar el medidor de agua, jale el espaciador, sacándolo de la ranura y retraiga la tuerca del medidor.

3210-644 7/19

800.292.2737 | FAX 800.832.9296 | sales@aymcdonald.com | aymcdonald.com

AVISO IMPORTANTE: LEA DETENIDAMENTE

Instrucciones de instalación

Válvula telescópica de medidor

1) Mantenga la tuerca del medidor extendida con el espaciador en su lugar durante la instalación y presurización.

2) Para retirar el medidor de agua, jale el espaciador, sacándolo de la ranura y retraiga la tuerca del medidor.

3210-644 7/19

800.292.2737 | FAX 800.832.9296 | sales@aymcdonald.com | aymcdonald.com

AVISO IMPORTANTE: LEA DETENIDAMENTE

Instrucciones de instalación

Válvula telescópica de medidor

1) Mantenga la tuerca del medidor extendida con el espaciador en su lugar durante la instalación y presurización.

2) Para retirar el medidor de agua, jale el espaciador, sacándolo de la ranura y retraiga la tuerca del medidor.

3210-644 7/19

800.292.2737 | FAX 800.832.9296 | sales@aymcdonald.com | aymcdonald.com

AVISO IMPORTANTE: LEA DETENIDAMENTE

Instrucciones de instalación

Válvula telescópica de medidor

1) Mantenga la tuerca del medidor extendida con el espaciador en su lugar durante la instalación y presurización.

2) Para retirar el medidor de agua, jale el espaciador, sacándolo de la ranura y retraiga la tuerca del medidor.

3210-644 7/19

800.292.2737 | FAX 800.832.9296 | sales@aymcdonald.com | aymcdonald.com